


SOP of Wifi Module Usage

Before using wifi module to monitor the system, we need to send the wifi name and password of your WIFI internet to the module, the setting steps are as below:


1. Scan two dimensional code to download the APP.



2. Connect your mobile to the same WIFI internet which your wifi module need to connect, open App, input the SSID and password.

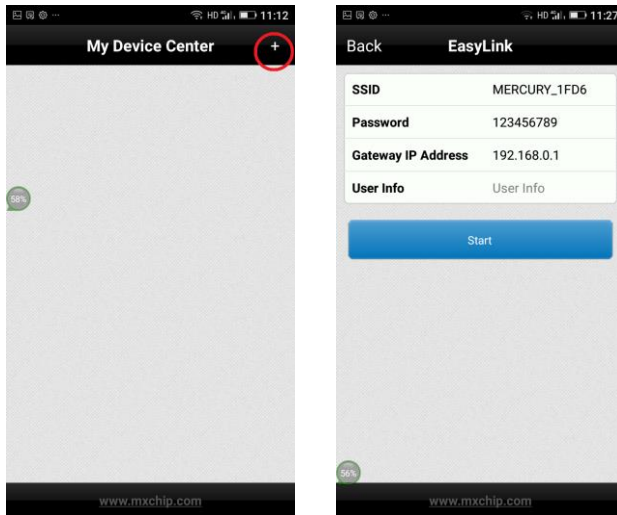

3. Plug in wifi module to inverter, turn on the inverter. After about 30 seconds, LED1 blink fast which means the wifi module has go to set password status, please click "start" button of your app to set the SSID and password. After 2 minutes, LED1 will be solid on which means the module has connect the internet successful. If LED1 blink all the time, please try to click "start" button again.

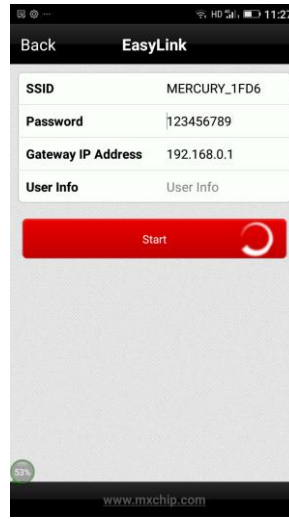

4. After LED1 solid on, LED2 will blink for 10 seconds which means the wifi module is connecting with inverter. Then LED2 will be solid on. Two LEDs solid on means the wifi module is working normally.



5. After 5 minutes, please visit <http://120.79.53.27/WManage/web/login> to check the system working status.

